


Først må du vite ip-adressen til ruterens din. Den kan du finne ved å bruke pc'en. Finn frem til menyen nederst i venstre hjørne. Trykk START og KJØR , tast CMD i tekstfeltet og trykk OK.

I vinduet som nå åpner seg taster du ipconfig og trykker ENTER knappen(linjeskift). Da kommer det en del tekst opp i vinduet, og under "Ethernet-kort Lokal tilkobling:" finner du en ip-adresse til høyre for "Default gateway". Dette er ruterens ip-adresse.

Eksempel:

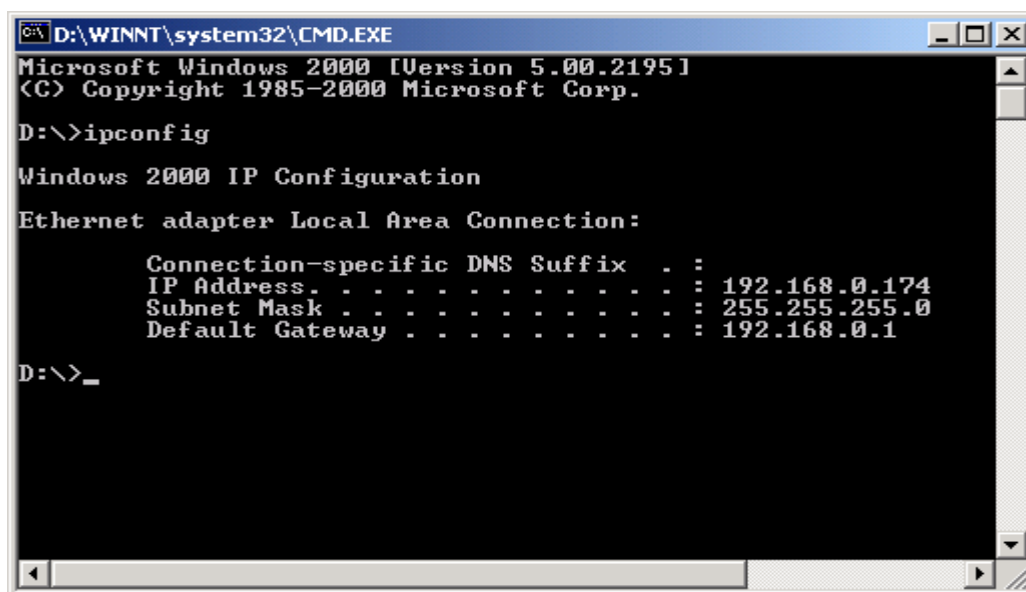

```
D:\WINNT\system32\CMD.EXE
Microsoft Windows 2000 [Version 5.00.2195]
(C) Copyright 1985-2000 Microsoft Corp.

D:\>ipconfig

Windows 2000 IP Configuration


Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . .               : 192.168.0.174
    Subnet Mask . . . . .             : 255.255.255.0
    Default Gateway . . . . .         : 192.168.0.1

D:\>_
```

Steg 2.

Start Internet Explorer på din pc og skriv inn www.routerlogin.net i adressefeltet.

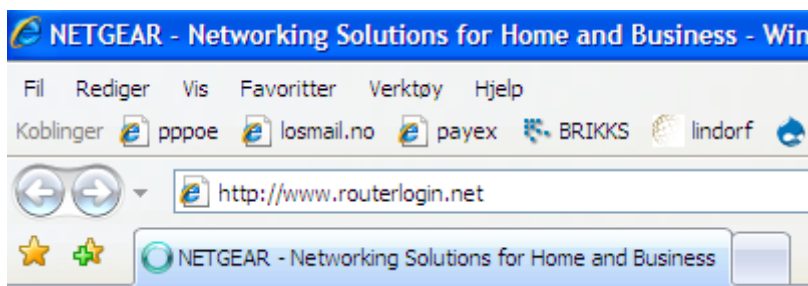

Steg 3.

Hvis du har skrevet inn riktig i steg 2, så vil innloggingsvinduet komme frem. Standard innlogging er:

Brukernavn: admin

Passord: admin

Hvis du har tidligere laget et eget brukernavn og passord på ruterens skal du bruke dette.



Enter Network Password

Please type your user name and password.

Site: www.routerlogin.com

Realm: WGT624

User Name: admin

Password: xxxxxxxx

Save this password in your password list

OK Cancel

Steg 4.

Når du har logget deg inn kommer bilde under frem. Trykk på "Basic Settings"

NETGEAR Router - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Search Favorites Media Links login.asp

Address http://www.routerlogin.net/start.htm

NETGEAR settings

108 Mbps Wireless Firewall Router WGT624 v3

- Setup Wizard
- Setup
 - Basic Settings
 - Wireless Settings
- Content Filtering
 - Logs
 - Block Sites
 - Block Services
 - Schedule
 - E-mail
- Maintenance
 - Router Status
 - Attached Devices
 - Backup Settings
 - Set Password
 - Router Upgrade
- Advanced
 - Wireless Settings
 - Port Forwarding / Port Triggering
 - WAN Setup
 - LAN IP Setup
 - Dynamic DNS
 - Static Routes
 - Remote Management
 - UPnP
- Web Support
 - Knowledge Base

Basic Settings

Does Your Internet Connection Require A Login?

Yes

No

Account Name (If Required)

Domain Name (If Required)

Internet IP Address

Get Dynamically From ISP

Use Static IP Address

IP Address . . .

IP Subnet Mask . . .

Gateway IP Address . . .

Domain Name Server (DNS) Address

Get Automatically From ISP

Use These DNS Servers

Primary DNS . . .

Secondary DNS . . .

Router MAC Address

Use Default Address

Use Computer MAC Address

Use This MAC Address

Apply Cancel Test

Help and Documentation

The Basic Settings pages allow you to configure, upgrade and check the status of your NETGEAR Wireless Router.

Click an item in the leftmost column. The current settings or information for that area appear in the center column.

Helpful information related to the selected Settings page appears in this column. If you are using Internet Explorer, you may click an item in the center column to jump directly to the related help section; otherwise, scroll down until you reach it.

For the most current documentation, go to http://kbserver.netgear.com/products_auton

Basic Settings Help

Note: If you are setting up the router for the first time, the default settings may work for you with no changes.

Does Your Internet Connection Require A Login?

Select this option based on the type of account you have with your ISP. If you need to enter login information every time you connect to the Internet or you have a PPPoE account with your ISP, select **Yes**. Otherwise, select **No**.

Note: If you have installed PPP software such as WinPoET (from Earthlink) or Enternet (from PacBell), then you have PPPoE. Select **Yes**. After selecting Yes

Steg 5.

Når du har trykket på Basic Settings så kommer bilde nr 1 frem. Her ser du at det står markert med Yes under **”Does your internet connection require a login?”**. Denne skal endres til No som vist på bilde nr 2. Sjekk også at **”internet IP address”** er krysset av for **”Get dynamically from ISP”** og at **”domain name server DNS address”** er krysset av for **”Get automatically from ISP”**. Etter at du har gjort det så trykk på **”Apply”**.

Bilde 1

Basic Settings

Does Your Internet Connection Require A Login?

Yes
 No

Internet Service Provider

Login
Password
Service Name (If Required)
Idle Timeout (In Minutes)

Internet IP Address

Get Dynamically From ISP
 Use Static IP Address

. . .

Domain Name Server (DNS) Address

Get Automatically From ISP
 Use These DNS Servers

Primary DNS . . .
Secondary DNS . . .

Bilde 2

Basic Settings

Does Your Internet Connection Require A Login?

Yes

No

Account Name (If Required)

Domain Name (If Required)

Internet IP Address

Get Dynamically From ISP

Use Static IP Address

IP Address

IP Subnet Mask

Gateway IP Address

Domain Name Server (DNS) Address

Get Automatically From ISP

Use These DNS Servers

Primary DNS

Secondary DNS

Router MAC Address

Use Default Address

Use Computer MAC Address

Use This MAC Address

Etter at du har lagret innstillingene, så ta ut strømmen på ruterer og la den starte på nytt. Da vil ruter få automatsik ip adresse og pc vil automatisk logge seg på ruter. Det kan ta noen minutter etter en restart av ruterer at pc logger seg på.